

ELECTROMAGNETIC CASE CLEANER **L.E.M. EXCLUSIVE 9**

WASHING PROGRAM DESCRIPTION




THE LEM EXCLUSIVE 9 MODEL HAS TWO WASHING MODES :

AUTOMATIC MODE (WASHING PROGRAM)

The automatic mode initiates a dedicated washing program for heavily soiled cases, featuring a cycle that includes stops, reversals, and changes in motor speed (the operator cannot change any settings during washing as the electronic potentiometer is automatically disabled).

To activate the washing program, the switch must be set to ON with the potentiometer at the minimum speed position (red zone).

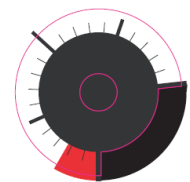

After about 30 minutes, the motor will stop automatically. To restart it, the switch must be set to OFF, and then turned back to ON after approximately 20 seconds.

MANUAL MODE

The manual mode allows the operator to freely choose the motor speed (minimum 600 RPM, maximum 2,800 RPM). To operate the case cleaner in this mode, the start switch must be set to ON with the potentiometer indicator at medium or maximum speed (outside the red zone).

After about 40 minutes, the motor will stop completely. To restart it for another complete wash, the switch must be set to OFF and then back to ON after 20 seconds.

WARNING

MAX. BRASS WEIGHT: 1,8 Kg -- MAX. MICRO-NEEDLES: 150 g -- MAX. WATER: 5 L -- USE COLD WATER ONLY
Exceeding these limits may damage the machine.